

## Remote Controller User Guide

1. **Power:** Turns the Set Top Box on/off.
2. **Playback Controls:** Controls playback of video content (On Demand).
3. **Navigation Buttons:** Moves the highlight around the screen to the option you want.
4. **OK:** Selects the option you have highlighted or confirms your choice.
5. **INFO:** Shows information about the programme you have highlighted.
6. **Mute:** Turns the Set Top Box sound off/on.
7. **BACK:** Shows the previous screen/channel.
8. **VOL (+/-):** Helps increase/decrease volume.
9. **PG/CH (+/-):** Changes Channel. Also move page up/down in user interface.
10. **HOME:** Takes you to the Home screen.
11. **FAV:** Takes you to your favourite channel list.
12. **TV:** Exits from user interface to Live TV.
13. **Search/Help:** Takes to the Search/Help screen.
14. **TV Guide:** Takes you to Live TV entry screen. Helps to select programme channel.
15. **My Zone:** Helps to set up reminders, alerts & more.
16. **On Demand:** Takes you to On Demand content screen.
17. **iServices:** Takes you to interactive applications screen.
18. **Color Buttons:** Helps select color options shown on screen.
19. **Alpha/Numeric Buttons:** Enter channel number or enter text (as per application).



*For any further assistance and information:*

- Call : 1860-26-69929 (MyWay)
- Email : help@myway.in
- SMS : 'MYWAY' to 56767
- Website : www.myway.in